

DV-5000HD

User manual



FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Note:

This equipment has been tested and found to comply with the limits for Class B digital devices, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Use of shielded cable is required to comply with Class B limits in Subpart B of Part 15 of the FCC rules.

Do not make any changes or modifications to the equipment unless otherwise specified in the manual. If such changes or modifications should be made, you could be required to stop operation of the equipment.

Notice

If static electricity or electromagnetism causes data transfer to discontinue midway (fail), restart the application or disconnect and connect the communication cable (USB, etc.) again.

READ THIS FIRST

Trademark Information

- Microsoft® and Windows® are U.S. registered trademarks of Microsoft Corporation.
- Pentium® is a registered trademark of Intel Corporation.
- Macintosh is a trademark of Apple Computer, Inc.
- SD™ is a trademark.
- Other names and products may be trademarks or registered trademarks of their respective owners.

Product Information

- Product design and specifications are subject to change without notice. This includes primary product specifications, software, software drivers, and user's manual. This User Manual is a general reference guide for the product.
- The manufacturer assumes no liability for any errors or discrepancies in this user manual.

SAFETY INSTRUCTIONS

Read and understand all **Warnings** and **Cautions** before using this product.

Warnings

If foreign objects or water have entered the video camera, turn the power off and remove the batteries.

Continued use might cause fire or electric shock. Consult the store of purchase.



If the video camera has fallen or its case has been damaged, turn the power off and remove the batteries.

Continued use might cause fire or electric shock. Consult the store of purchase.



Do not disassemble, change or repair the video camera.

This might cause fire or electric shock. For repair or internal inspection, ask the store of purchase.



Do not use the video camera in areas near water.

This might cause fire or electric shock. Take special care during rain, snow, on the beach, or near the shore.



Do not place the video camera on inclined or unstable surfaces.

This might cause the video camera to fall or tilt over, causing damage.



Keep the batteries out of the reach of children.

Swallowing the batteries might cause poisoning. If the batteries are accidentally swallowed, immediately consult a physician.



Do not use the video camera while you are walking, driving or riding a motorcycle.

This might cause you to fall over or result in traffic accident.



Please use batteries with complete external seals.

Do not use batteries from which the seals have been damaged or removed. This may cause leakage, explosion, or injury.



Cautions

Load the batteries paying careful attention to the polarity (+ or –) of the terminals.



Loading the batteries with their polarities inverted might cause fire and injury, or damage to the surrounding areas due to the battery rupturing or leaking.

Do not flash the LED lights close to anyone's eyes.



This might cause damage to the person's eyesight.

Do not subject the LCD monitor to impact.



This might damage the glass on the screen or cause the internal fluid to leak. If the internal fluid enters your eyes or comes into contact with your body or clothes, rinse with fresh water. If the internal fluid has entered your eyes, consult a physician to receive treatment.

A video camera is a precision instrument. Do not drop it, strike it or use excessive force when handling the video camera.



This might cause damage to the video camera.

Do not use the video camera in humid, steamy, smoky, or dusty places.



This might cause fire or electric shock.

Do not remove the batteries immediately after long period of continuous use.



The batteries become hot during use. Touching a hot battery might cause burns.

Do not wrap the video camera or place it in cloth or blankets.



This might cause heat to build up and deform the case, resulting in fire. Use the video camera in a well-ventilated place.

Do not leave the video camera in places where the temperature may rise significantly, such as inside a car.



This might adversely affect the case or the parts inside, resulting in fire.

Before you move the video camera, disconnect cords and cables.



Failure to do this might damage cords and cables, resulting in fire and electric shock.

Notes on Battery Usage

When you use the batteries, carefully read and strictly observe the **Safety Instructions** and the notes described below:

- Use only the specified batteries. (AA batteries)
- Avoid extremely cold environments as low temperatures can shorten the battery life and reduce video camera performance. Therefore Ni-MH rechargeable batteries are highly recommended.
- When you are using a new rechargeable batteries or rechargeable batteries that have not been used for an extended period of time (the batteries that passed the expiry date are exception), it may affect the number of images that can be captured. Therefore, to maximize their performance and lifetime, we recommend that you fully charge the batteries and discharge them for at least one complete cycle before use.
- The batteries may feel warm after a long period of continuous use of the video camera. This is normal and not a malfunction.
- The video camera may feel warm after a long period of continuous use. This is normal and not a malfunction.
- If the batteries are not to be used for a long period of time, remove them from the video camera to prevent leakage or corrosion and store them after no battery power is left. Stored for a long time in a fully charged condition, their performance may be impaired.
- Always keep the battery terminals clean.
- There is a risk of explosion if the batteries are replaced by an incorrect type.
- Dispose of used batteries according to the recycle instructions.
- Charge the rechargeable batteries fully before using for the first time.
- Never use batteries of different types (together) or mix old and new batteries.
- Never use manganese batteries.
- To prevent short-circuiting or fire, keep the batteries away from other metal objects when carrying or storing.

CONTENTS

7 INTRODUCTION

- 7 Overview
- 7 Package Contents

8 GETTING TO KNOW YOUR DIGITAL VIDEO CAMERA

- 8 Front View
- 9 Rear View
- 10 LCD Monitor Display

14 GETTING STARTED

- 14 Preparation
- 15 Turning the Power On/Off
- 15 LED Indicators
- 16 Handling the Digital Video Camera
- 17 Setting the Date and Time
- 17 Choosing the Language
- 18 Formatting the Memory Card

19 CAPTURE MODE

- 19 Recording Video Clips
- 19 Capturing Still Images
- 20 Using the Zoom Function
- 20 Setting the Focus
- 21 Setting the Self-Timer

22 PLAYBACK MODE

- 22 Playing Back Video Clips
- 23 Playing Back Still Images
- 24 Playing Back Still Images/Video Clips on TV
- 24 Connecting the digital video camera to HDTV
- 25 Thumbnail Display
- 26 Slide Show Display
- 26 Delete File
- 27 Protecting Images

28 AUDIO MODE

- 28 Recording Audio Files
- 28 Playing Back Audio Files

29 MENU OPTIONS

- 29 Video Menu
- 31 Capture Menu
- 33 Playback Menu
- 34 Setup Menu

36 INSTALLING SOFTWARE PROGRAM

37 TRANSFERRING FILES TO YOUR COMPUTER

- 37 Downloading / Deleting Your Files via Computer

38 SPECIFICATIONS

39 APPENDIX

- 39 Troubleshooting
- 40 Customer Care
- 41 WEEE Statement

INTRODUCTION

Overview

Thank you for purchasing this AgfaPhoto digital camera. Please read these operating instructions carefully in order to use the digital camera correctly. Keep the instructions in a safe place after reading so that you can refer to them later.

Package Contents


Carefully unpack your digital video camera and ensure that you have the following items:

Common Product Components:

- AgfaPhoto DV-5000HD
- CD-ROM
- USB cable
- AV cable
- YPbPr (HD out) cable
- Camera strap
- Camera pouch
- 2 x AA size batteries


GETTING TO KNOW YOUR DIGITAL VIDEO CAMERA

Front View

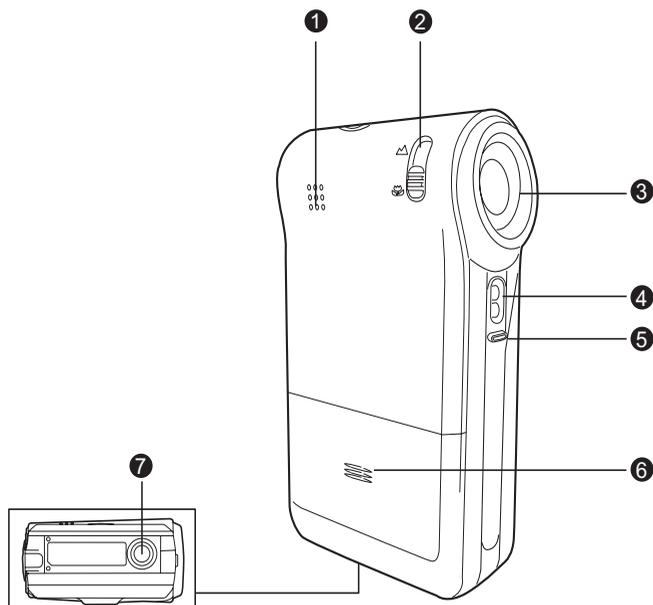

- 1. Speaker
- 2. Focus switch
 - ▲ Normal mode
 - ▼ Macro mode
- 3. Lens
- 4. LED lights
- 5. Microphone
- 6. Battery cover
- 7. Tripod socket

Rear View

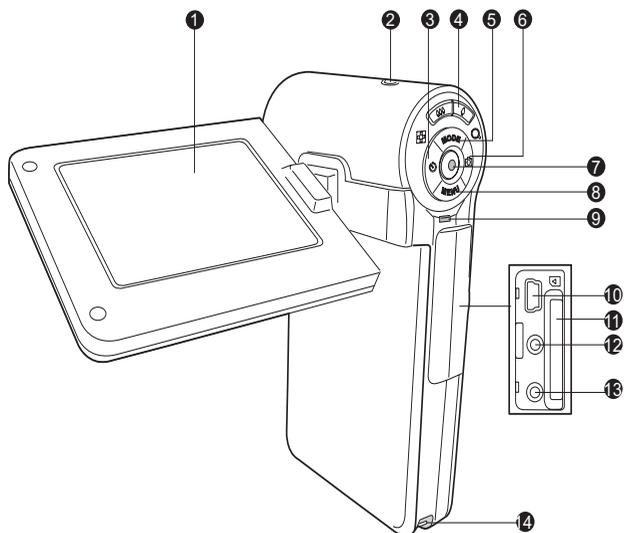

1. LCD monitor

2. Power button

3. Left button
 Self-timer button

4. / Zoom out (wide-angle) button / Thumbnail button
 / Zoom in (telephoto) button

5. Up button
MODE Mode button

6. Right button
 Camera mode quick key

7. OK/Shutter button

8. Down button
MENU Menu button

9. Status LED indicator

10. USB port

11. SD/SDHC memory card slot

12. AV OUT1 terminal

13. AV OUT2 (HD OUT) terminal


14. Strap holder

LCD Monitor Display

Standby Mode


Video Mode

1. Video mode icon
2. Available recording time
[00:02:05]
3. Storage media
[SD] SD/SDHC memory card
4. Battery condition
[🔋] Full battery power
[🔋] Medium battery power
[🔋] Low battery power
[🔋] No battery power
5. Zoom status bar
6. Exposure compensation
7. White Balance
[AUTO] Auto
[☀] Daylight
[🔥] Tungsten
[🏠] Fluoresc.1
[🏠] Fluoresc.2
[☁] Cloudy
8. Image quality
[📄] Fine
[📄] Standard
[📄] Economy
9. Video size
[1280] 1280 x 720
[720] 720 x 480
[352] 352 x 240
10. Focus setting
[Blank] Normal
[🌸] Macro
11. Self-timer
[⌚ 10s] 10 sec.
[⌚ 2s] 2 sec.

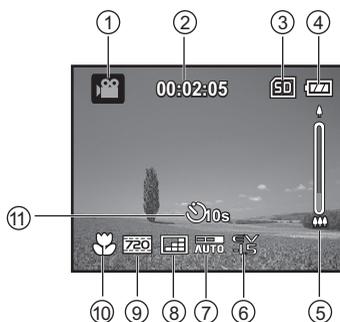


Camera Mode

1. Camera mode icon
2. Available number of shots
3. Storage media
4. Battery condition
5. Zoom status bar
6. Capture mode icon
 - [Blank] Single
 - [] Burst
 - [] AEB
7. ISO
 - [] Auto
 - [] 50
 - [] 100
 - [] 200
 - [] 400
8. Exposure compensation
9. White Balance
10. Image quality
11. Image size
 - [8m]3264 x 2448 (FW interpolation)
 - [5m]2560 x 1920
 - [3m]2048 x 1536
 - [1m]1280 x 960
 - [0.3m]640 x 480
12. Focus setting
13. Self-timer

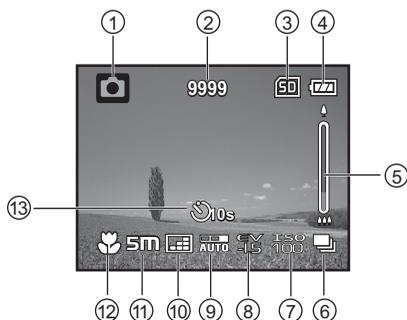


Audio Recording Mode (Standby)

1. Audio mode icon
2. Available recording time
3. Storage media
4. Battery condition
5. Elapsed time
6. Recording indicator
7. Status indicator

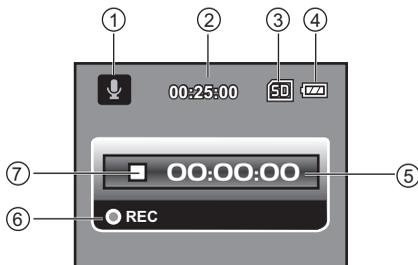

(Recording)

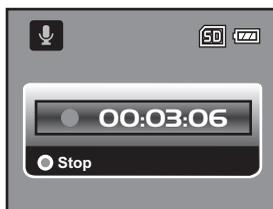

Playback Mode


Video Mode

1. Playback mode icon
2. Elapsed time
3. Storage media
4. Battery condition
5. Folder and file number
6. Volume indicator
7. Video status bar
8. Playback indicator




Camera Mode

1. Playback mode icon
2. Storage media
3. Battery condition
4. Folder and file number

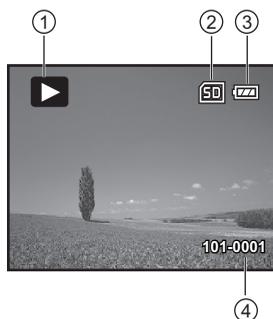

Audio Playback Mode




1. Playback mode icon
2. Elapsed time
3. Storage media
4. Battery condition
5. Volume indicator
6. Folder and file number (ex. 100-0011)
7. Stop indicator
8. Playback indicator
9. Audio status bar

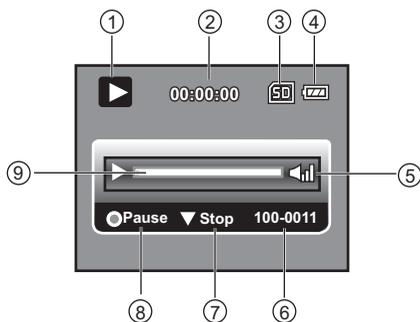


GETTING STARTED

Preparation

1. Attach the camera strap.
2. Open the battery cover.
3. Insert the supplied batteries with correct orientation as shown.
4. Insert an SD/SDHC memory card.
 - Be sure to format the SD/SDHC memory card with this video camera before its initial usage.
 - Close the battery cover and make sure it is locked securely.

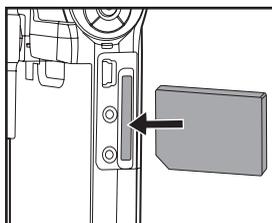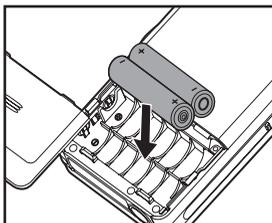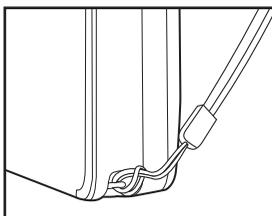


- To prevent valuable data from being accidentally deleted from an SD/SDHC memory card, you can slide the write protect tab (on the side of the SD/SDHC memory card) to "LOCK".
- To save, edit, or delete data on an SD/SDHC memory card, you must unlock the card.
- To prevent damaging of SD/SDHC memory card, be sure to turn off the power when inserting or removing the SD/SDHC memory card. If inserting or removing the SD/SDHC memory card with the power on, the digital video camera will automatically turn off.
- Be careful not to drop the batteries when opening or closing the battery cover.

 

Turning the Power On/Off

Load the batteries and insert an SD/SDHC memory card before starting.

- Press the  button until the digital video camera turns on.
- To turn the power off, press the  button again.

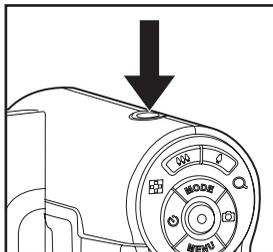



- The power is turned off automatically when the digital video camera has not been operated for a defined period of time. To resume operation, turn the power on again. Refer to section in this manual titled "Power Off" in the Setup Menu for further details.

LED Indicators

Indicators	State	Description/Activity
LED indicator	Solid green	The digital video camera is powering up.
LED indicator	Solid green	The digital video camera is ready to record images (or videos).
LED indicator	Solid green	USB communication/transfer is in progress.
LED indicator	Blinking green	Reading/Writing files.

Handling the Digital Video Camera



1. Open the panel by pulling it away from the digital video camera.
2. Choose the angle of the monitor that suits you best by rotating the panel.

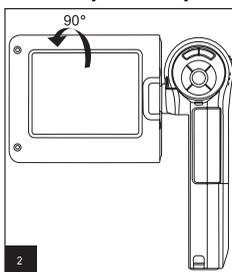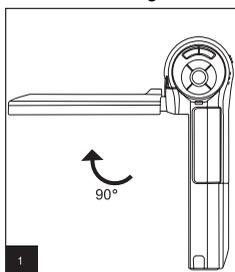

- Make sure you open the LCD panel at 90 degrees before attempting to rotate it.
- Rotate the LCD panel carefully with the correct direction. Over rotation or rotating to the wrong direction may damage the hinge that connects the LCD monitor to the digital video camera.
- Avoid touching the LCD monitor when moving the LCD panel.

Cautions:


- Do not hold the digital video camera by only holding the LCD panel.
- Be careful not to block the lens, microphone, or LED lights with your fingers when shooting.
- Close the LCD panel when not using the digital video camera to avoid damages.

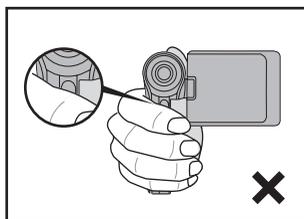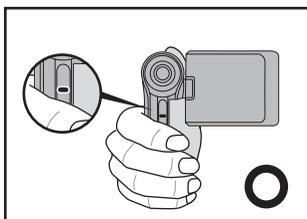

Setting the Date and Time

The date/time needs to be set if/when:

- The digital video camera is turned on for the first time.
 - The digital video camera is turned on after being left without batteries for an extended period of time.
1. Press the  button until the digital video camera turns on.
 2. Press the **MENU** button.
 3. Select [Setup] with the  button.
 4. Select [Date/Time] with the  /  buttons, and press the  button.
 - Select the item's field with the  /  buttons and adjust the value for the date and time with the  /  buttons.
 - The time is displayed in 24-hour format.
 - After confirming all settings are correct, press the  button.
 5. To exit from the [Setup] menu, press the  button.

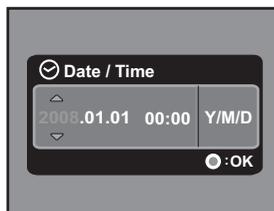

Choosing the Language

Specify in which language menus and messages are to be displayed on the LCD monitor.



1. Press the **MENU** button.
2. Select [Setup] menu with the  button.
3. Select [Language] with the  /  buttons, and press the  button.
 - The Language setting screen will be displayed.
4. Select the displayed language with the  /  buttons, and press the  button.
 - The setting will be stored.



Formatting the Memory Card

This utility formats the SD/SDHC memory card and deletes all stored images, video clips, and data.

1. Press the **MENU** button.
2. Select [Setup] menu with the ► button.
3. Select [Format] with the ▲ / ▼ buttons, and press the Ⓒ button.
4. Select [Yes] with the ▲ / ▼ buttons, and press the Ⓒ button.
 - To cancel formatting, select [No] and press the Ⓒ button.

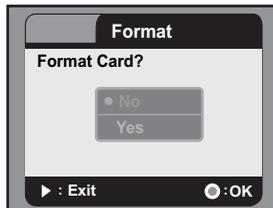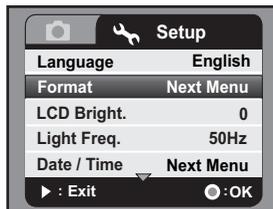


CAPTURE MODE

Your digital video camera is equipped with a 2.36" TFT-LCD monitor to help you capture/playback images and video clips or adjust menu settings.

Recording Video Clips

1. Press the  button until the digital video camera turns on.
 - The default mode is Video Mode.
2. Compose the image on the LCD monitor.
3. Press the  button to start recording.
4. Press the  button again to stop recording.
 - The recording time depends on the storage media size and the subject to be recorded.

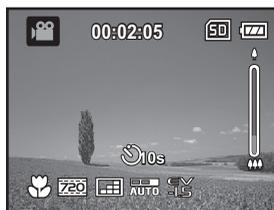

Capturing Still Images

1. Press the  button until the digital video camera turns on.
2. Press the **MODE** button or  button (camera mode quick key) to enter Capture Mode.
3. Compose the image on the LCD monitor.
4. Press the  button to capture the image.




- If the access speed of your SD/SDHC memory card is not fast enough for recording video clips in the currently selected size, the recording will stop. In this case, select a video quality lower than the current one.

Using the Zoom Function

This digital video camera is equipped with digital zoom. You may enlarge the subjects by pressing the  button. While digital zoom can be a useful feature, the more an image is enlarged (zoomed), the more pixelated (grainier) the image will appear.

To capture a zoomed image/video clip, perform the following steps:

1. Compose the image on the LCD monitor.
 - Press the  button to zoom in on the subject, and enlarge the subject on the LCD monitor.
 - Press the  button to view a wider angle of the image.
 - The status of digital magnification is displayed on the zoom status bar.
2. Press the  button to capture the image/video clip.

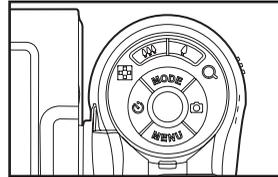


- The zoom function may be activated as you record video clips.

Setting the Focus

Images/Video clips may be captured by sliding the focus switch to set the focus modes: [] macro or [] normal mode.

1. Slide the focus switch to your desired focus mode.
2. Compose the image on the LCD monitor
3. Press the  button to capture the image/video clip.

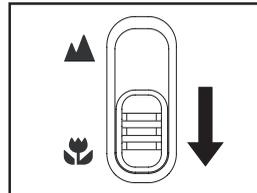


Focus mode	Description
 Normal	This mode is suitable for scenery and portrait shooting.
 Macro	Select macro to capture close-up images. When the lens is zoomed to its widest position you may focus objects as close as 60 cm.

Setting the Self-Timer

The self-timer may be used in situations such as group shots. When using this option, you should either mount the digital video camera on a tripod (recommended) or place it on a flat, level surface.

1. Press the  button to select the self-timer setting.
2. Compose the image on the LCD monitor and press the  button.
 - The self-timer function is activated and begins to count down.
3. The image/video clip is captured after the preset time has elapsed.

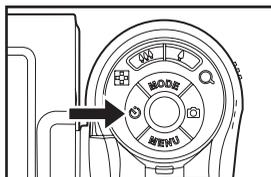

Self-timer mode	Description
 2s	The image is captured about 2 seconds after the shutter is pressed. This mode is useful for preventing camera shake.
 10s	The image is captured about 10 seconds after the shutter is pressed. This mode is suitable for the shots in which the photographer has to be included.




- After one image/video clip is taken, the self-timer mode is turned off. If you wish to take another shot using the self-timer, repeat the above steps.

PLAYBACK MODE

Playing Back Video Clips

1. Press the **MODE** button until  is displayed.
 - The last recorded image/video clip appears on the LCD monitor.
2. Select the desired video clip with the  /  buttons.
3. Press the  button to start video playback.
 - To pause video playback, press the  button.
 - To cancel pause, press the  button again.
4. To stop video playback, press the  button and return to the start of the video clip.

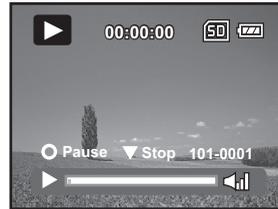

- Video clips cannot be displayed rotated or enlarged.
- To play back video clips on your computer, you may use Windows Media Player 9 with additional H.264 Codec (H.264 Codec is free on the Internet) or Quick Time basic player (7.0 or above version).
- QuickTime basic player is available free of charge, compatible with Mac and Windows-computers and can be downloaded from the Apple web site at www.apple.com. For helps on using QuickTime Player, please refer to the QuickTime on-line help for more information.

Playing Back Still Images

1. Press the **MODE** button until  is displayed.
 - The last recorded image/video clip appears on the LCD monitor.
2. Select the desired image with the  /  buttons.
3. The images can be displayed in reverse or forward sequence with the  /  buttons.
4. Press the  button to adjust the zoom ratio. The magnification factor is displayed on the LCD monitor.
5. To view different portion of the images, press the  /  /  /  button to adjust the display area.




Playing Back Still Images/Video Clips on TV

You can also playback your images on a TV screen. Before connecting to any devices, make sure to select NTSC / PAL system to match the video output system of the video equipment you are going to connect to the digital video camera, then turn all connected devices off.

1. Connect one end of the AV cable to the AV OUT1 terminal of the digital video camera.
2. Connect the other end to the AV input socket of the TV set.
3. Turn the TV and digital video camera on.
4. Playback the still images/video clips.
5. The method of operation is the same as playing back still images and video clips on the digital video camera.

Connecting the digital video camera to HDTV

HD TV (High Definition Television) is a digital television broadcasting system with better resolution than traditional television systems. It can perform HD (720P) high resolution quality.

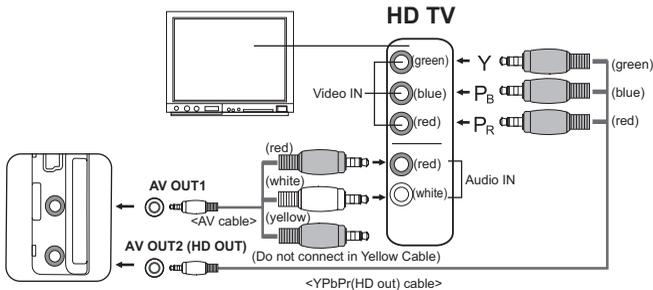


1. Connect one end of the YPbPr (HD out) cable into the (Video IN) port on the HDTV and the other end into the AV OUT2 (HD out) terminal of the digital video camera.
2. Connect one end of the AV cable into the (Audio IN) socket of the HDTV and the other end into the (AV OUT1) terminal of the digital video camera. (Do not connect the yellow connector to HDTV's AV-IN.)
3. Turn the TV and digital video camera on.
 - The video camera will auto detect and set the settings when the cables are connected.

Thumbnail Display

This function allows you to view 6 thumbnail images on the LCD monitor simultaneously so you may search for a particular image/video clip.

1. Press the **MODE** button until  is displayed.
2. Press the  button.
 - 6 thumbnail images are displayed simultaneously.
3. Use the  /  /  /  buttons to move the cursor to select the image to be displayed at regular size.
4. Press the  button to display the selected image on full screen.

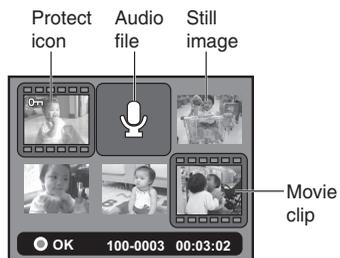

Slide Show Display

The slideshow function enables you to play back your still images automatically in sequential order as a slideshow. This is a very useful and entertaining feature for reviewing captured images and for presentations.

1. Press the **MODE** button until  is displayed.
2. Press the **MENU** button.
3. Select [Slide Show] with the \blacktriangle / \blacktriangledown buttons and press the \odot button.
4. Select the desired interval time with the \blacktriangle / \blacktriangledown buttons, and press the \odot button.
 - The slide show starts.
 - To stop the slideshow during playback, press the \blacktriangledown button.



- Video clips are displayed as images and will not be played back.

Delete File

1. Press the **MODE** button until  is displayed.
2. Select the file you wish to delete with the \blacktriangleleft / \blacktriangleright buttons.
3. Press the **MENU** button.
4. Select [Delete File] or [Delete All] with the \blacktriangle / \blacktriangledown buttons and press the \odot button.
 - [Delete File]: Deletes the current file.
 - [Delete All]: Deletes all files.
5. Select [Yes] to delete. Select [No] to cancel.
6. Press the \odot button to confirm.



Protecting Images

Set the data to read-only to prevent images/video clips from being deleted by mistake.

1. Press the **MODE** button until  is displayed.
2. Select the image/video clip you wish to protect with the ◀ / ▶ buttons.
3. Press the **MENU** button.
4. Select [Protect] with the ▲ / ▼ buttons and press the  button.
5. Select [Single], [Select], or [All] with the ▲ / ▼ buttons, and press the  button.
 - [Single]: Protects the current image/video clip.
 - [Select]: Select the images/video clips you wish to protect in thumbnail mode. Press the  button to mark the selected images/video clips.
 - [All]: Protects all images/video clips.
6. Press the  button.
 - Protection is applied to the selected images and the video camera returns to the previous menu mode.
 - The protect icon  is displayed with protected images.
7. To cancel protection, repeat steps 2 to 6 from above.
 - The removal of image protection is executed and the video camera returns to the previous menu mode.




- Formatting an SD/SDHC memory card overrides protection, and deletes all images regardless of their protected status.

AUDIO MODE

Recording Audio Files


The digital video camera enables you to record and playback audio files anytime and anywhere.

1. Press the **MODE** button to enter Audio Mode.
2. Press the  button to start audio recording.
 - To pause recording, press the  button again.
 - To stop recording, press the  button.

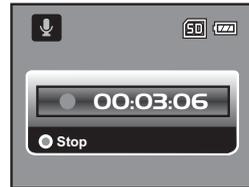

Playing Back Audio Files

1. Press the **MODE** button until  is displayed.
2. Press the  button to begin playback.
 - To pause, press the  button again.
 - To stop playback, press the  button.

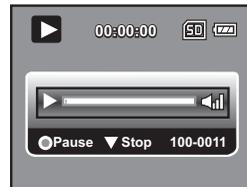

MENU OPTIONS

Video Menu

This menu is for the basic settings to be used when shooting video clips.



1. The default mode is Video Mode.
2. Press the **MENU** button.
3. Select the desired option item with the ▲ / ▼ buttons, and press the ● button to enter its respective menu.
4. Select the desired setting with the ▲ / ▼ buttons, and press the ● button.
5. To exit from the menu, press the ◀ button.

Size

This sets the size of the video clips that will be captured.

- * [] 1280 x 720
- * [] 720 x 480
- * [] 352 x 240

Quality

This sets the quality (compression) at which the image is captured.

- * [] Fine
- * [] Standard
- * [] Economy

EV

Your digital video camera adjusts the exposure of each shot automatically. However, if the subject is very dark, or very bright, you may override the digital video camera's automatic exposure determination to make the subject brighter or darker. This is called EV compensation. The EV compensation can be adjusted from -1.8EV to +1.8EV.

W.Balance

This sets the white balance for a variety of lighting conditions and permits images to be captured that approach the conditions that are seen by the human eye.

- * [] Auto
- * [] Daylight
- * [] Tungsten
- * [] Fluoresc.1
- * [] Fluoresc.2
- * [] Cloudy

LED

This sets whether the camera's LED lights are activated during usage.

- * [Auto]: The LED lights will automatically turn on when recording video clips and turns off when the recording ends.
- * [On]: The LED lights are turned on all the time during usage.
- * [Off]: The LED lights are turned off all the time during usage.

Capture Menu

This menu is for the basic settings to be used when capturing still images.



1. Press the **MODE** button or button (camera mode quick key) to enter Capture Mode.
2. Press the **MENU** button.
3. Select the desired option item with the \blacktriangle / \blacktriangledown buttons, and press the \odot button to enter its respective menu.
4. Select the desired setting with the \blacktriangle / \blacktriangledown buttons, and press the \odot button.
5. To exit from the menu, press the \blacktriangleleft button.

Size

This sets the size of the images that will be captured.

- * **[8m]**3264 x 2448 (FW interpolation)
- * **[5m]**2560 x 1920
- * **[3m]**2048 x 1536
- * **[1 m]**1280 x 960
- * **[0.3m]**640 x 480

Quality

Refer to the section in this manual titled “Quality” in Video Menu for further details.

EV

Refer to the section in this manual titled “EV” in Video Menu for further details.

W.Balance

Refer to the section in this manual titled “W.Balance” in Video Menu for further details.

LED

Refer to the section in this manual titled “LED” in Video Menu for further details.

ISO

This sets the sensitivity for capturing images. When the sensitivity is raised (and the ISO figure is increased), photography will become possible even in dark locations, but the more pixelated (grainier) the image will appear.

* Auto / 50 / 100 / 200 / 400

Capture

This sets the shooting mode for capturing still images.

* **[Blank]** Single: Captures a single image.

* [] Burst: Captures 3 images continuously.

* [] AEB: Auto exposure bracketing capture mode.

Playback Menu

In this menu, choose which settings are to be used for still image/video clip playback.



1. Press the **MODE** button until  is displayed.
2. Press the **MENU** button.
3. Select the desired option item with the ▲ / ▼ buttons, and press the  button to enter its respective menu.
4. Select the desired setting with the ▲ / ▼ buttons, and press the  button.
5. To exit from the menu, press the ◀ button.

Slide Show

Refer to section in this manual titled “Slideshow Display” for further details.

Delete File

Refer to section in this manual titled “Deleting Still Images/Video Clips” for further details.

Delete All

Refer to section in this manual titled “Deleting Still Images/Video Clips” for further details.

Protect


Refer to section in this manual titled “Protecting Images” for further details.

Sound

This sets the sound volume. The adjustment range is from level 0 (soundless) to 5 (loudest).

Setup Menu

This menu sets your digital video camera's operating environment.

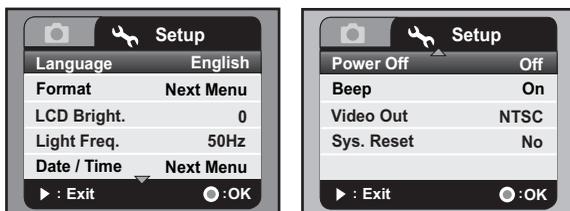

1. Press the **MENU** button.
2. Select the [Setup] menu with the ► button.
3. Select the desired option item with the ▲ / ▼ buttons, and press the ● button to enter its respective menu.
4. Select the desired setting with the ▲ / ▼ buttons, and press the ● button.
5. To exit from the menu, press the ► button.

Language

Refer to section in this manual titled “Choosing the Language” for further details.

Format

Refer to section in this manual titled “Formatting the Memory Card” for further details.

Light Freq.

The function allows to change the light frequency of environment to 60Hz or 50Hz.

* [60Hz]: the light frequency of environment is 60Hz

* [50Hz]: the light frequency of environment is 50Hz

LCD Bright.

This sets the brightness of the LCD monitor screen.

* The adjustment range is from -5 to +5.

Date/Time

Refer to section in this manual titled “Setting the Date and Time” for further details.

Power Off

If no operation is performed for a specific period of time, the power to the digital video camera is automatically turned off. This feature is useful to reduce battery usage.

* Off / 1Min. / 3Min. / 5Min. / 10Min.

Beep

This sets whether or not to mute the startup sound, and the video camera sounds each time you press a button.

* On / Off

Video Out

Sets video compatibility with the equipment you are going to connect to the digital video camera. For YPbPr(HD out) Video out function, the video camera will auto detect and set the settings when the cable is connected.

* [NTSC]: NTSC system

* [PAL]: PAL system

Sys. Reset

Returns all basic settings to the digital video camera's default settings.

* Yes / No

INSTALLING SOFTWARE PROGRAM

1. Please make sure you have Windows Media Player 9 or QuickTime 7.0 installed onto your computer first.
2. Please install the Decoder program (available in the CD).
 - H.264 files may be played back with Windows Media Player 9. (Decoder is design for H.264 decode)

MP4/H.264 playback System Requirements:

- At least 512MB of RAM
- 64MB or higher video card
- Windows 2000 Service Pack 4 or XP or Vista 32 or Vista 64
- DirectX 9.0b or higher
- Audio format 48KHz HE-AAC or AAC

Resolution	fps	CPU requirements
720x480	30fps	2.4 GHz Intel Pentium 4 or higher
1280x720	30fps	3.2 GHz Intel Pentium D(dual-core) or higher

TRANSFERRING FILES TO YOUR COMPUTER

System Requirement

Windows	Macintosh
<ul style="list-style-type: none">■ Pentium 166 MHz or higher■ Windows 2000/XP/Vista■ 128MB RAM■ 128MB hard disk space■ CD-ROM drive■ Available USB port	<ul style="list-style-type: none">■ PowerPC G3/G4/G5■ OS 9.0 or later■ 128MB RAM■ 128MB hard disk space■ CD-ROM drive■ Available USB port

Downloading / Deleting Your Files via Computer

1. Press the  button until the digital video camera turns on.
2. Connect one end of the USB cable to the USB terminal of the digital video camera.
3. Connect the other end of the USB cable to an available USB port on your computer.
4. From the Windows desktop, double click on “My Computer”.
5. Look for a new “removable disk” icon.
 - This “removable disk” is actually the memory (or memory card) in your video camera. Typically, the video camera will be assigned drive letter “E” or higher.
6. Double click on the removable disk and locate the DCIM folder.
7. Double click on the DCIM folder to open it to find more folders.
 - Your recorded images, video clips and audio files will be inside these folders.
8. Copy and paste or drag and drop files to a folder on your computer.
9. To delete files, simply select the unwanted files and delete.

Mac users: Double-click the “untitled” or “unlabeled” disk drive icon on your desktop. iPhoto may automatically launch.



-
- Formatting the SD/SDHC memory card by computer (via USB connection) as NTFS file system, the stored data will be automatically deleted by the video camera.
 - Do not format the SD/SDHC memory card as NTFS file system.

SPECIFICATIONS

Item	Description
Image sensor	1/2.5" CMOS sensor
Effective pixels	5.0 Mega pixels
Image resolution	<Still image> 8M: 3264 x 2448 (FW interpolation), 5M: 2560 x 1920, 3M: 2048 x 1536, 1M: 1280 x 960, 0.3M: 640 x 480 <Video clip> HD: 1280 x 720 (30 fps), D1: 720 x 480 (30 fps), CIF: 352 x 240 (30 fps)
Recording media	Supports SD/SDHC memory card (up to 4GB) (optional)
File format	Image format: JPEG; video format: H.264
Lens	Aperture: F3.1 Focal Length: 7.5mm
Focus range	Macro: 60 ~ 100 cm Normal: 100cm ~ infinity
LCD monitor	2.36" full color LTPS-TFT LCD (115K pixels)
Self-timer	10 sec delay, 2 sec delay
Exposure compensation	-1.8EV~ +1.8EV (in 0.3EV increments)
White balance	Auto, Daylight, Tungsten, Fluorescent1, Fluorescent2, Cloudy
ISO	Auto, 50, 100, 200, 400
Interface	USB 2.0 connector, AV OUT1 terminal, AV OUT2 (HD OUT) terminal
Power	2 x AA size batteries
Dimensions	Approx. 106.5 x 59 x 30 mm (without protruding parts)
Weight	Approx. 130g (without batteries and memory card)

* Design and specifications are subject to change without notice.

APPENDIX

Troubleshooting

Refer to the symptoms and solutions listed below before sending the digital video camera for repairs. If the problem persists, contact your local reseller or service center.

Symptom	Cause	Solutions / Corrective Actions
The power does not come on.	The batteries are not loaded or loaded incorrectly.	Load the batteries correctly.
	The batteries are exhausted.	Replace with a new set of batteries.
The batteries or video camera feels warm.	Long period of continuous use of the video camera.	
Even if I press the shutter button, the digital video does not shoot.	The SD/SDHC memory card does not have any free capacity.	Insert a new SD/SDHC memory card, or delete unwanted files.
	The video camera is not in shooting mode.	Set the video camera to shooting mode.
	The SD/SDHC memory card is write-protected.	Remove the write-protection.
The video camera cannot focus.	The lens is dirty.	Wipe clean with a soft, dry cloth or lens paper.
	The distance to the subject is smaller than the effective range.	Place your subject within the effective focus range.
Files cannot be deleted.	The file is protected.	Cancel protection.
	The SD/SDHC memory card is write-protected.	Remove the write-protection.
Cannot download images.	The free space on the hard disk in your computer may be insufficient.	Check whether the hard disk has a space for running Windows, and if the drive for loading image files has a capacity at least that of the memory card inserted in the video camera.

Customer care

More information on the complete AgfaPhoto digital camera product range can be found at www.plawa.com

Service & Repair (USA/ Canada):

1-866 475 2605

www.plawausa.com

Support Service (USA/ Canada)

Support-apdc@plawausa.com

Service & Repair Hotline (EU):

00800 752 921 00 (from a landline only)

Service & Support Hotline (Germany):

0900 1000 042 (1.49 euros/min. from a German landline only)

Online Service / International contact:

support-apdc@plawa.com

Manufactured by

plawa-feinwerktechnik GmbH & Co. KG

Bleichereistraße 18

73066 Uhingen

Germany

AgfaPhoto is used under license of Agfa-Gevaert NV & Co. KG. Agfa-Gevaert NV & Co. KG. does not manufacture this product or provide any product warranty or support. For service, support and warranty information, contact the distributor or manufacturer. Contact: AgfaPhoto Holding GmbH, www.agfaphoto.com

Disposal of Waste Equipment by Users in Private Households in the European Union



This symbol on the product or on its packaging indicates that this product must not be disposed of with your other household waste. Instead, it is your responsibility to dispose of your waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. The separate collection and recycling of your waste equipment at the time of disposal will help to conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment. For more information about where you can drop off your waste equipment for recycling, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

FCC Compliance and Advisory

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: 1.) this device may not cause harmful interference, and 2.) this device must accept any interference received, including interference that may cause unsatisfactory operation. This equipment has been tested and found to comply with the limits for a Class B peripheral, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communication. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures.

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. When shielded interface cables have been provided with the product or when specified additional components or accessories have elsewhere been designated to be used with the installation of the product, they must be used in order to ensure compliance with FCC regulations.