

DV-5580Z

User manual



FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Note:

This equipment has been tested and found to comply with the limits for Class B digital devices, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Use of shielded cable is required to comply with Class B limits in Subpart B of Part 15 of the FCC rules.

Do not make any changes or modifications to the equipment unless otherwise specified in the manual. If such changes or modifications need to be made, you could be required to stop operation of the equipment.

Notice

If static electricity or electromagnetism causes data transfer to discontinue midway (fail), restart the application or disconnect and connect the communication cable (USB, etc.) again.

READ THIS FIRST

Trademark Information

- Microsoft® and Windows® are U.S. registered trademarks of Microsoft Corporation.
- Pentium® is a registered trademark of Intel Corporation.
- Macintosh is a trademark of Apple Inc.
- SD™ is a trademark.
- SDHC™ is a trademark.
- Other names and products may be trademarks or registered trademarks of their respective owners.

Product Information

- Product design and specifications are subject to change without notice. This includes primary product specifications, software, software drivers, and the user's manual. This User Manual is a general reference guide for the product.
- The product and accessories that come with your camera may be different from those described in this manual. This is due to the fact that different retailers often specify slightly different product inclusions and accessories to suit their market requirements, customer demographics, and geographical preferences. Products very often vary between retailers especially with accessories such as batteries, chargers, AC adapters, memory cards, cables, pouches, and language support. Occasionally a retailer will specify a unique product color, appearance, and internal memory capacity. Contact your dealer for precise product definition and included accessories.
- The illustrations in this manual are for the purpose of explanation and may differ from the actual design of your camera.
- The manufacturer assumes no liability for any errors or discrepancies in this user manual.

SAFETY INSTRUCTIONS

Read and understand all **Warnings** and **Cautions** before using this product.

Warnings

If foreign objects or water have entered the camera, turn the power off and remove the battery.

Continued use might cause fire or electric shock. Consult the store of purchase.



If the camera has fallen or its case has been damaged, turn the power off and remove the battery.

Continued use might cause fire or electric shock. Consult the store of purchase.



Do not disassemble, change or repair the camera.

This might cause fire or electric shock. For repair or internal inspection, ask the store of purchase.



Use the supplied AC adapter only with the indicated power supply voltage.

Use with any other power supply voltage might cause fire or electric shock.



Do not use the camera in areas near water.

This might cause fire or electric shock. Take special care in rain, snow, on the beach, or near the shore.



Do not place the camera on sloping or unstable surfaces.

This might cause the camera to fall or topple over, causing damage.



Keep the battery out of the reach of children.

Swallowing the battery might cause poisoning. If the battery is accidentally swallowed, consult a physician immediately.



Do not use the camera while you are walking, driving or riding a motorcycle.

This might cause you to fall over or result in a traffic accident.



Only use battery with intact external seals.

Do not use battery whose seals have been damaged or removed. This may cause leakage, explosion, or injury.



Cautions

Insert the battery paying careful attention to the polarity (+ or –) of the terminals.



Inserting the battery with its polarities inverted might cause fire and injury, or damage to the surrounding areas due to the battery rupturing or leaking.

Do not subject the LCD monitor to impact.



This might damage the glass on the screen or cause the internal fluid to leak. If the internal fluid enters your eyes or comes into contact with your body or clothes, rinse with fresh water. If the internal fluid has entered your eyes, consult a physician.

A camera is a precision instrument. Do not drop it, strike it or use excessive force when handling the camera.



This might cause damage to the camera.

Use the camera with caution, avoiding sudden power cutoff during operation.



This might cause file error, corrupt the stored data or even damage the hardware.

Do not use the camera in humid, steamy, smoky, or dusty places.



This might cause fire or electric shock.

Do not remove the battery immediately after a long period of continuous use.



The battery becomes hot during use. Touching a hot battery might cause burns.

Do not cover the camera or wrap it in cloths or blankets.



This might cause heat to build up and deform the case, resulting in fire. Use the camera in a well-ventilated place.

Do not leave the camera where the temperature may rise significantly, such as inside a car.



This might adversely affect the case or the parts inside, resulting in fire.

Before you move the camera, disconnect cords and cables.



Failure to do this might damage cords and cables, resulting in fire and electric shock.

Notes on Battery Usage

When you use the battery, carefully read and strictly observe the **Safety Instructions** and the notes described below:

- Use only the specified battery (3.7V).
- Avoid extremely cold environments as low temperatures can shorten the battery life and reduce camera performance.
- When you are using a new rechargeable battery or a rechargeable battery that has not been used for an extended period of time (a battery that has passed its expiry date is an exception), it may affect the number of images that can be captured. Therefore, to maximize its performance and lifetime, we recommend that you fully charge the battery and discharge it for at least one complete cycle before use.
- The battery may feel warm after a long period of continuous use of the camera. This is normal and not a malfunction.
- The camera may feel warm after a long period of continuous use. This is normal and not a malfunction.
- If the battery is not to be used for a long period of time, remove it from the camera to prevent leakage or corrosion and store it after no battery power is left. Stored for a long time in a fully charged condition, its performance may be impaired.
- Always keep the battery terminals clean.
- There is a risk of explosion if the battery is replaced by an incorrect type.
- Dispose of the used battery in accordance with recycling instructions.
- Charge the rechargeable battery fully before using for the first time.
- To prevent short-circuiting or fire, keep the battery away from other metal objects when carrying or storing.



This symbol mark [crossed-out wheeled bin] indicates separate collection of waste batteries in the EU countries. The batteries provided with this product shall not be treated as household waste. Please use the return and collection systems available in your country for the disposal of the waste batteries.

If a chemical symbol is printed beneath the symbol mark, this chemical symbol means that the batteries contains a heavy metal at a certain concentration. It is indicated as follows:

Hg: mercury, Cd: cadmium, Pb: lead.

CONTENTS

- 7 INTRODUCTION**
- 7 Overview
- 7 Package Contents
- 8 GETTING TO KNOW YOUR DIGITAL VIDEO CAMERA**
- 8 Front View
- 9 Rear View
- 10 LCD Monitor Display
- 13 GETTING STARTED**
- 13 Preparation
- 14 Charging the Battery
- 15 Turning the Power On/Off
- 15 LED Indicators
- 16 Handling the Digital Video Camera
- 17 Setting the Date and Time
- 17 Choosing the Language
- 18 Formatting the Memory Card
- 19 CAPTURE MODE**
- 19 Recording Video Clips
- 19 Capturing Still Images
- 20 Using the Zoom Function
- 20 Using the Assist Light
- 21 Recording Shots using Face Detection Technology
- 22 Setting Manual White Balance
- 23 AUDIO MODE**
- 23 Recording Audio Files
- 23 Playing Back Audio Files
- 24 PLAYBACK MODE**
- 24 Playing Back Video Clips
- 24 Playing Back Still Images
- 25 Playing Back Still Images/Video Clips on TV
- 25 Connecting the Digital Video Camera to HDTV
- 26 Thumbnail Display
- 26 Slide Show Display
- 27 Protecting Images/Video Clips/Audio Files
- 28 DPOF Settings
- 29 Deleting Images/Video Clips/Audio Files
- 30 MENU OPTIONS**
- 30 Video Menu
- 32 Capture Menu
- 34 Playback Menu
- 35 Setup Menu
- 37 INSTALLING SOFTWARE PROGRAM**
- 38 TRANSFERRING FILES TO YOUR COMPUTER**
- 38 Downloading / Deleting Your Files via Computer
- 39 USING THE DIGITAL VIDEO CAMERA AS A PC CAMERA**
- 40 SPECIFICATIONS**
- 41 APPENDIX**
- 41 Possible Number of Shots
- 42 Troubleshooting
- 43 Customer Care

INTRODUCTION

Overview

Thank you for purchasing this AgfaPhoto videocamera. Please read these operating instructions carefully in order to use the videocamera correctly. Keep the instructions in a safe place after reading so that you can refer to them later.

Package Contents

 
Carefully unpack your digital video camera and ensure that you have the following items:

Product Components:

- AgfaPhoto DV-5580Z
- Software CD-ROM
- USB cable
- AV cable
- YPbPr (HD out) cable
- Earphone
- Camera strap
- Camera pouch
- Rechargeable lithium-ion battery
- Quick start guide


GETTING TO KNOW YOUR AGFAPHOTO DV-5580Z

Front View

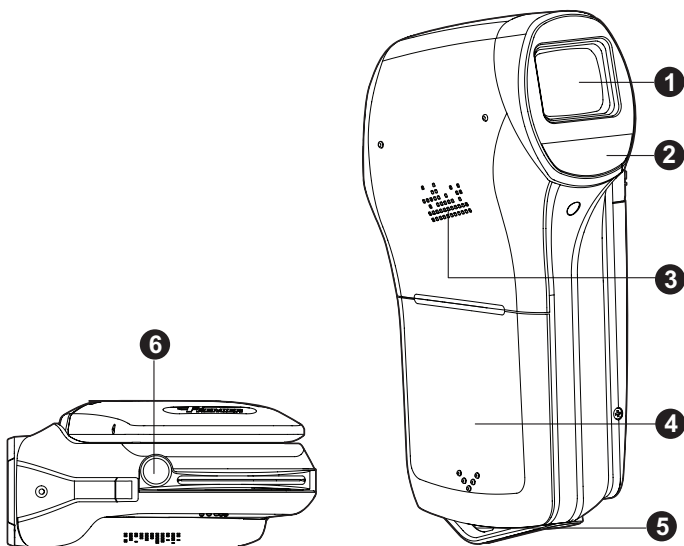

1. Lens
2. LED assist light
3. Speaker
4. Battery cover
5. Strap holder
6. Tripod mount

 Rear View

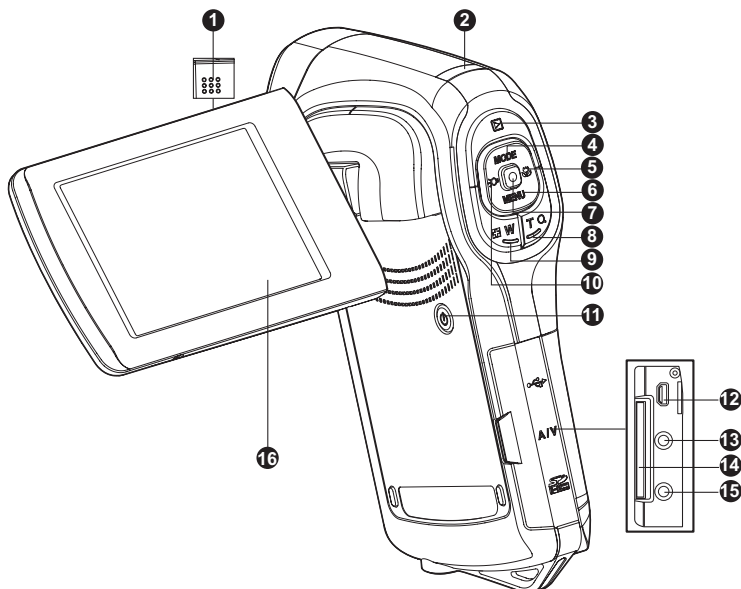


- | | |
|------------------------------------|-------------------------------------------------------|
| 1. Microphone | 9. W Zoom out (wide-angle) button / Thumbnail button |
| 2. Status LED | 10. Left button |
| 3. Play button | Assist light button |
| 4. Up button | 11. Power button |
| MODE Mode button | 12. USB or AV OUT terminal |
| 5. Right button | 13. HDTV terminal |
| Focus button | 14. SD/SDHC memory card slot |
| 6. Down button | 15. Earphone jack |
| MENU Menu button | 16. LCD monitor |
| 7. OK / Record / Shutter button | |
| 8. T Q Zoom in (telephoto) button | |

LCD Monitor Display


Standby Mode

 Video Mode

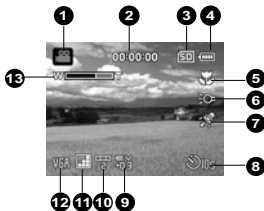

1. Video mode icon
2. Available recording time
3. Storage media
4. SD/SDHC memory card
5. Battery condition
 - Full battery power
 - Medium battery power
 - Low battery power
 - No battery power
6. Focus setting
 - [Blank] Normal
 - Macro
 - Infinity
7. Assist light ON
8. Scene mode
 - [Blank] Auto
 - Portrait
 - Night
 - Sports
 - Landscape
 - Sunset
 - Beach/Snow
 - Spotlight
 - User Setting
9. Self-timer
 - 10s 10 sec.
 - 2s 2 sec.
10. Exposure compensation
11. White balance
 - [Blank] Auto
 - Daylight
 - Cloudy
 - Fluoresc.1
 - Fluoresc.2
 - Tungsten
 - Manual WB
12. Image quality
 - Fine
 - Standard
 - Economy
13. Video size
 - 1440 x 1080
 - 1280 x 720
 - VGA 640 x 480

 Camera Mode

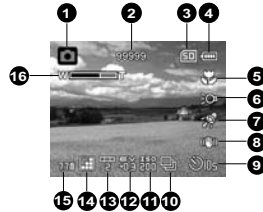

1. Camera mode icon
2. Available number of shots
3. Storage media
4. Battery condition
5. Focus setting
 - [Blank] Normal
 - Macro
 - Infinity
 - Face detection
6. Assist light ON
7. Scene mode
8. Image stabilization icon
9. Self-timer
10. Capture mode icon
 - [Blank] Single
 - AEB
 - Continuous
11. ISO
 - [Blank] Auto
 - 64
 - 100
 - 200
 - 400
12. Exposure compensation
13. White balance
14. Image quality
15. Image size
 - [77M] 3200 x 2400 (FW interpolation)
 - [5M] 2560 x 1920
 - [3M] 2048 x 1536
 - [1M] 1280 x 960
 - [VGA] 640 x 480
16. Zoom status bar

Audio Recording Mode (Standby)



1. Audio mode icon
2. Available recording time
3. Storage media
4. Battery condition
5. Elapsed time
6. Recording indicator
7. Status indicator (standby)

 
(Recording)



1. Recording indicator
2. Status indicator (recording)


Playback Mode

Video Mode

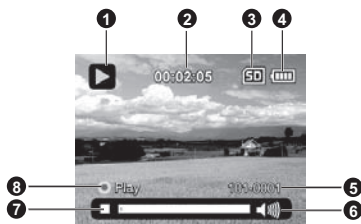


1. Video playback mode icon
2. Elapsed time
3. Storage media
4. Battery condition
5. Folder and file number
6. Volume indicator
7. Video status bar
8. Playback indicator

 Camera Mode

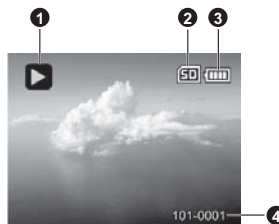

1. Image playback mode icon
2. Storage media
3. Battery condition
4. Folder and file number

 Audio Playback Mode



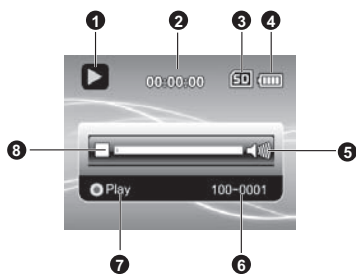


1. Audio playback mode icon
2. Elapsed time
3. Storage media
4. Battery condition
5. Volume indicator
6. File name (ex. 100-0001)
7. Playback indicator
8. Audio status bar


GETTING STARTED

Preparation

   1. Attach the camera strap.
 2. Open the battery cover.
-
3. Insert the supplied battery with correct orientation as shown. (Label side to the back)
 - Close the battery cover and make sure it is locked securely.
 4. Insert an SD/SDHC memory card.
 - The digital video camera does not have a built-in memory and cannot operate without an SD/SDHC memory card inserted. Make sure to insert an SD/SDHC memory card before use.
 - Open the SD card slot cover carefully.
 - Insert an SD/SDHC memory card (optional) into the card slot.
 - Close the cover and make sure it is locked securely.
 - Be sure to format the SD/SDHC memory card with this video camera before its initial usage.

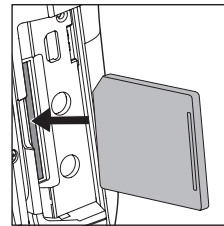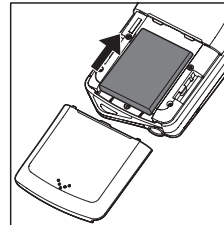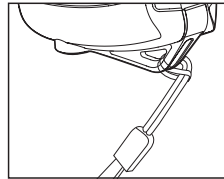

- To prevent valuable data from being accidentally deleted from an SD/SDHC memory card, you can slide the write protect tab (on the side of the SD/SDHC memory card) to "LOCK".
- To save, edit, or delete data on an SD/SDHC memory card, you must unlock the card.
- To prevent damaging of SD/SDHC memory card, be sure to turn off the power when inserting or removing the SD/SDHC memory card. If inserting or removing the SD/SDHC memory card with the power on, the digital video camera will automatically turn off.
- Be careful not to drop the battery when opening or closing the battery cover.

 

Charging the Battery

 
Charge the battery fully with the supplied battery charger before use.

1. Insert the battery into the battery charger.

- The battery should be inserted into the charger with the label to the back.

2. Connect the power cord to the charger and insert the plug into a wall outlet.

- The status LED on the charger lights red when charging has started and lights green when charging is completed. The LED also lights green if no battery is inserted into the charger.

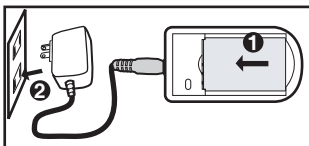

- Charging time varies according to the ambient temperature and the status of battery.



- Remove the battery after charging is completed.

 


- The battery may feel warm after it has been charged or immediately after being used. This is normal and not a malfunction.
- When using the camera in cold areas, keep the camera and battery warm by holding them inside your outer clothes.

Turning the Power On/Off

Load the battery and insert an SD/SDHC memory card before starting.

- Press the  button until the digital video camera powers on.
- To turn the power off, press the  button again.

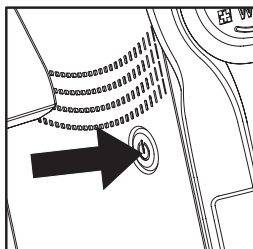


- The power is turned off automatically when the digital video camera has not been operated for a defined period of time. To resume operation, turn the power on again. Refer to the section in this manual titled "Auto Off" in the setup menu for further details.

LED Indicators

Indicators	State	Description/Activity
Status LED	Solid green	The digital video camera is powering up.
Status LED	Solid green	The digital video camera is ready to record images (or videos).
Status LED	Blinking green	USB communication/transfer is in progress.
Status LED	Blinking green	Reading/Writing files.

Handling the Digital Video Camera

 1. Open the panel by pulling it away from the digital video camera.
2. Choose the angle of the monitor that suits you best by rotating the panel.
 - The panel rotates up to 270°. This is useful for self-portrait.

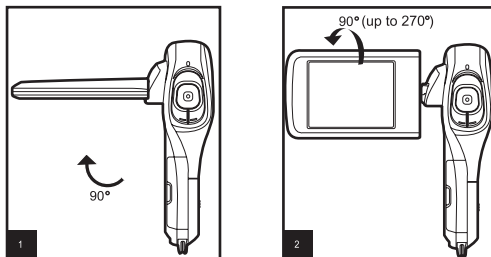






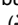
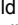
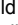



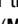

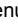
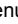
- Make sure you open the LCD panel at 90 degrees before attempting to rotate it.
- Rotate the LCD panel carefully in the correct direction. Over rotation or rotating in the wrong direction may damage the hinge that connects the LCD monitor to the digital video camera.
- Avoid touching the LCD monitor when moving the LCD panel.



Cautions:

- Do not hold the digital video camera by holding the LCD panel only.
- Be careful not to block the lens, microphone, or LED lights with your fingers when shooting.
- Close the LCD panel when not using the digital video camera to avoid damage.

  Setting the Date and Time




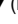


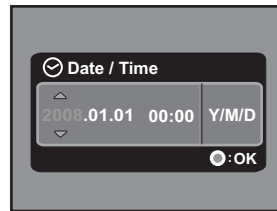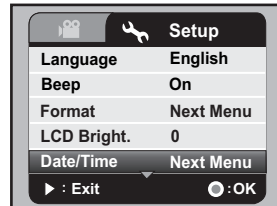

The date/time needs to be set if / when:

 
- The digital video camera is turned on for the first time.
 - The digital video camera is turned on after being left without battery for an extended period of time.
1. Press the  button until the digital video camera turns on.
 2. Press the **MENU** button.
 3. Select [Setup] with the  () button.
 4. Select [Date/Time] with the  (**MODE**) /  (**MENU**) buttons, and press the  button.
 - Select the item field with the  () /  () buttons and adjust the value for the date and time with the  (**MODE**) /  (**MENU**) buttons.
 - The time is displayed in 24-hour format.
 - After confirming all settings are correct, press the  button.
 5. To exit from the [Setup] menu, press the  () button.



Choosing the Language

Specify in which language menus and messages are to be displayed on the LCD monitor.



1. Press the **MENU** button.
2. Select [Setup] menu with the  () button.
3. Select [Language] with the  (**MODE**) /  (**MENU**) buttons, and press the  button.
4. Select the displayed language with the  (**MODE**) /  (**MENU**) buttons, and press the  button.
 - The setting will be stored.

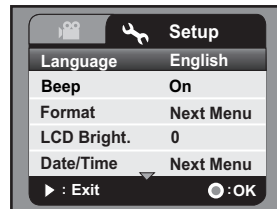

Formatting the Memory Card

  This utility formats the SD/SDHC memory card and deletes all stored images, videoclips, and data.


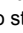

1. Press the **MENU** button.
2. Select [Setup] menu with the ► (🔍) button.
3. Select [Format] with the ▲ (MODE) / ▼ (MENU) buttons, and press the ◻ button.
4. Select [Yes] with the ▲ (MODE) / ▼ (MENU) buttons, and press the ◻ button.
 - To cancel formatting, select [No] and press the ◻ button.
5. To exit from the [Setup] menu, press the ► (🔍) button.

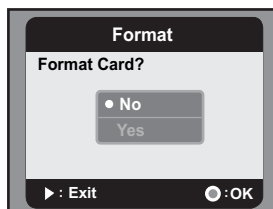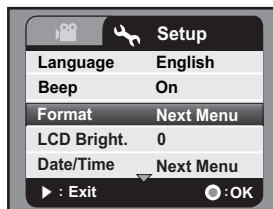

CAPTURE MODE

Your digital video camera is equipped with a 2.5" full color LTPS LCD monitor to help you capture/playback images and video clips or adjust menu settings.



Recording Video Clips

1. Press the  button until the digital video camera turns on.
 - The default mode is Video Mode.
2. Compose the image on the LCD monitor.
3. Press the  button to start recording.
4. To stop recording, press the  button.
 - The recording time depends on the storage media size and the subject to be recorded.



- If the access speed of your SD/SDHC memory card is not fast enough for recording video clips in the currently selected size, the recording will stop. In this case, select a video quality lower than the current one.
- When using an SDHC memory card to record high resolution video clips, higher than Class 4 is recommended to prevent recording from discontinuing.

Capturing Still Images

1. Press the  button until the digital video camera turns on.
2. Press the **MODE** button to switch to capture mode.
3. Compose the image on the LCD monitor.
4. Press the  button to capture the image.

 


Using the Zoom Function

Using a combination of 5x optical zoom and 4x digital zoom permits zoom photography at up to 20x magnification. While the digital zoom can be a useful feature, the more an image is enlarged (zoomed), the more pixelated (grainier) it will appear.

To capture a zoomed image/video clip, perform the following steps:

1. Compose the image on the LCD monitor.
 - Press the **T Q** button to zoom in on the subject, and enlarge the subject on the LCD monitor.
 - Press the **W** button to view a wider angle of the image.
 - The status of digital magnification is displayed on the zoom status bar.
 - At 1440 x 1080 (video mode): the preview can reach digital zoom to 2x. At 1280 x 720 and 640 x 480 (video mode): the preview can reach digital zoom to 4x.
2. Press the **REC** button to capture/record the image/video clip.

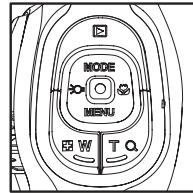


- To activate the digital zoom function, set [Digi. Zoom] to [On] in the capture or video menu.
- After impact or sudden shock, the image on LCD monitor may be blurred. Turn off the digital video camera and on again.

Using the Assist Light

When capturing still images/video clips in dark places, you can turn on the LED assist light at the front of the digital video camera to help brighten and focus on the subject.

 
1. In video/capture mode, press the **LED** button to turn the LED assist light on or off.

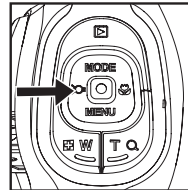





 - The assist light can only be activated in capture or video mode. When the digital video camera is switched to playback or audio mode, the assist light will turn off automatically.

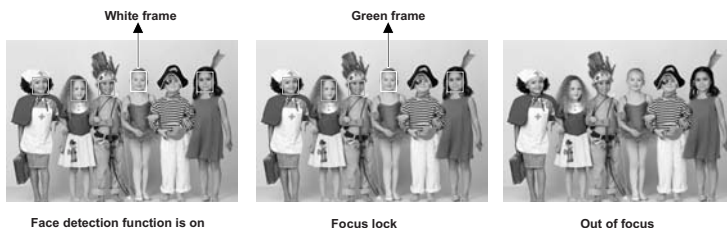Recording Shots using Face Detection Technology

Face Detection Technology can identify and focus on human faces in an image. This advanced function simultaneously detects up to 9 human faces regardless of their position in the scene.



1. In capture mode, toggle the  button until the  icon appears on the LCD monitor.
 - The white frame is identified as the “top priority” face (main focus frame), with gray ones around the other faces.
2. Press the  button halfway down to lock the focus.
 - The main focus frame simultaneously turns green.
 - If the “top priority” face is out of focus, all frames will disappear from the screen.
3. Press the  button down fully to capture your image.

 


- Subjects that are not suitable with this function:
 - a. A person wearing glasses, sunglasses, or a face that is covered with a hat or hair.
 - b. A person who is turning sideways.

Setting Manual White Balance

You can manually set and store the white balance when the menu options do not offer a good match.

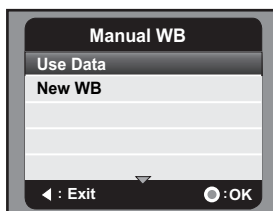

1. In video/capture mode, press the **MENU** button.
2. Select [W.Balance] with the **▲ (MODE) / ▼ (MENU)** buttons, and press the **⏏** button.
3. Select [Manual WB] with the **▲ (MODE) / ▼ (MENU)** buttons, and press the **⏏** button.
4. Select [New WB], and press the **⏏** button.
 - To use the previously set white balance data, select [Use Data], and press the **⏏** button.
5. Point the video camera at a white paper or white board, and press the **⏏** button.
 - When the manual white balance is stored, [COMPLETE] will be displayed and the video camera returns to recording mode.

 


AUDIO MODE







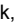


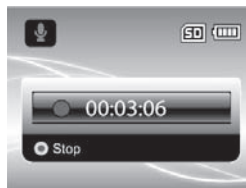Recording Audio Files

 
The digital video camera enables you to record and playback audio files anytime and anywhere.

1. Press the **MODE** button to switch to audio mode.
2. Press the  button to start audio recording.
 - To stop recording, press the  button.

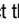

Playing Back Audio Files



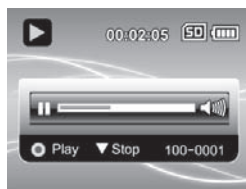








1. Press the  button.
2. Select the desired audio clip with the  () /  buttons.
3. Press the  button to begin playback.
 - To pause, press the  button again.
 - To stop playback, press the  (**MENU**) button.
 - To adjust the volume, use the  **W** / **T**  buttons.




PLAYBACK MODE

 You can play back all the recorded files on the LCD monitor.

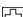



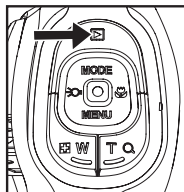






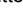
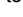
Playing Back Video Clips

1. Press the  button.
 - The last recorded file appears on the LCD monitor.
2. Select the desired video clip with the  () /  () buttons.
3. Press the  button to start video playback.
 - To pause video playback, press the  button.
 - To cancel pause, press the  button again.
 - To adjust the volume, use the  **W** / **T**  buttons.
4. To stop video playback, press the  (**MENU**) button and return to the start of the video clip.



- Video clips cannot be displayed rotated or enlarged.
- To play the video clip back on your computer, you can use Windows Media Player 9 or higher version. Windows Vista users can use Windows Movie Maker.

Playing Back Still Images

1. Press the  button.
 - The last recorded file appears on the LCD monitor.
2. Select the desired image with the  () /  () buttons.
3. Press the  **T**  button to adjust the zoom ratio.
 - The magnification factor is displayed on the LCD monitor.
4. To view a different section of the image, press the  (**MODE**) /  (**MENU**) /  () /  () buttons to adjust the display area.



- The magnification factors range from 1.5x to 8.0x.

 
Playing Back Still Images/Video Clips on TV

You can also play back your images on a TV screen. Before connecting to any devices, make sure you select NTSC / PAL system to match the video input system of the TV/video equipment you are going to connect to the digital video camera, then turn all connected devices off.

1. Connect one end of the AV cable to the AV OUT terminal of the digital video camera.
2. Connect the other end to the AV input socket of the TV set.
3. Turn the TV and digital video camera on.
4. Playback the still images/video clips.
5. The method of operation is the same as for playing back still images and video clips on the digital video camera.

Connecting the Digital Video Camera to HDTV

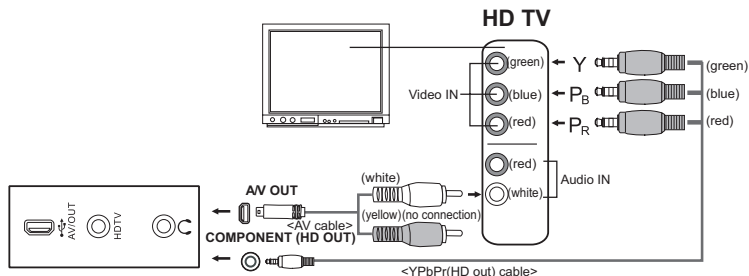

HD TV (High Definition Television) is a digital television broadcasting system with better resolution than traditional television systems. It can perform HD (720P) high resolution quality.



1. Connect one end of the YPbPr (HD out) cable to the (Video IN) port on the HDTV and the other end to the HDTV terminal of the digital video camera.
2. Connect one end of the AV cable to the (Audio IN) socket of the HDTV and the other end to the AV OUT terminal of the digital video camera. (Do not connect the yellow connector to HDTV's AV-IN.)
3. Turn the TV and digital video camera on.
 - The video camera will auto detect and configure the settings when the cables are connected.

Thumbnail Display




This function allows you to view thumbnail images on the LCD monitor so you can search for a particular image/video clip/audio file.

1. In playback mode, press the  **W** button.
 - 3 thumbnail images are displayed simultaneously.
2. Use the **▲ (MODE)** / **▼ (MENU)** buttons to select the file to be displayed.
 - Use the **◀ (◂)** / **▶ (▸)** buttons to go to the previous or next page.
3. Press the  button to display the selected image on full screen.



Slide Show Display

The slideshow function enables you to play back your still images automatically in sequential order as a slideshow. This is a very useful and entertaining feature for reviewing captured images and for presentations.

1. In the playback mode, press the **MENU** button.
2. Select [Slide Show] with the **▲ (MODE)** / **▼ (MENU)** buttons and press the  button.
3. Select the desired interval time with the **▲ (MODE)** / **▼ (MENU)** buttons, and press the  button.
 - The slide show starts.
 - To stop the slideshow during playback, press the  button.














- Video clips are displayed as images and will not be played back.
- Audio files are not displayed in slide show.

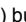Protecting Images/Video Clips/Audio Files





Set the data to read-only to prevent files from being deleted by mistake.

Protecting One File


1. Press the  button.
2. Select the file you wish to protect with the  () /  () buttons.
3. Press the **MENU** button.
4. Select [Protect] with the  (**MODE**) /  (**MENU**) buttons and press the  button.
5. Select [Single] with the  (**MODE**) /  (**MENU**) buttons, and press the  button.
 - The selected file is protected.
 - To cancel protection, perform step 1 to 5 again.



Protecting All Files

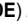


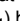
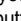
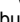






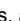

1. Select [All] from the Protect menu and press the  button.
2. Select [Lock] with the  (**MODE**) /  (**MENU**) buttons, and press the  button.
 - All stored files are protected.
 - To cancel all protection, perform the above steps and select [Unlock] in step 2.
 - To cancel protection for one specific file, perform above step 1 to 5 of "Protecting One File".





- The protect icon  is displayed with protected files.
- Formatting an SD/SDHC memory card overrides protection, and deletes all files regardless of their protected status.



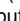



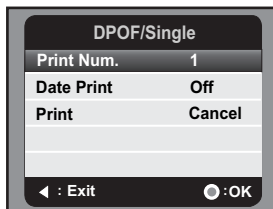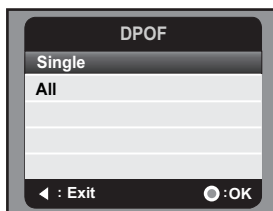  


DPOF Settings

 
DPOF is the abbreviation for Digital Print Order Format, which allows you to embed printing information on your memory card. You can select the images to be printed and how many prints to make with the DPOF menu in the digital video camera and insert the memory card into a card-compatible printer. When the printer starts printing, it will read the embedded information on the memory card and print the specified images.

1. Press the  button.
2. Select the image that you want to set DPOF with the  () /  () buttons.
3. Press the **MENU** button.
4. Select [DPOF] with the **▲ (MODE)** / **▼ (MENU)** buttons, and press the  button.
5. Select [Single] or [All] with the **▲ (MODE)** / **▼ (MENU)** buttons, and press the  button.
 - [Single]: Sets DPOF for each individual image.
 - [All]: Sets DPOF for all images at once.
6. Select [Print Num.] with the **▲ (MODE)** / **▼ (MENU)** buttons, and press the  button.
 - This displays the number of prints setting screen.
7. Set the number of prints with the **▲ (MODE)** / **▼ (MENU)** buttons, and press the  button.
8. Select [Date Print] with the **▲ (MODE)** / **▼ (MENU)** buttons, and press the  button.
 - The date setting screen appears.
9. Select date to [On] or [Off] with the **▲ (MODE)** / **▼ (MENU)** buttons, and press the  button.
 - [On]: The date of the image will also be printed.
 - [Off]: The date of the image will not be printed.
10. Select [Print] with the **▲ (MODE)** / **▼ (MENU)** buttons, and press the  button.
11. Select [Execute] with the **▲ (MODE)** / **▼ (MENU)** buttons, and press the  button.
 - This creates a file containing the DPOF information, and when the operation is finished, the screen returns to the playback mode.
 - The DPOF icon  is displayed on each image that has DPOF settings.



Deleting Images/Video Clips/Audio Files


1. Press the  button.
2. Select the file you wish to delete with the  () /  () buttons.
3. Press the **MENU** button.
4. Select [Delete File] or [Delete All] with the  (**MODE**) /  (**MENU**) buttons and press the  button.
 - [Delete File]: Deletes the current file.
 - [Delete All]: Deletes all files.
5. Select [Yes] to delete. Select [No] to cancel.
6. Press the  button to confirm.

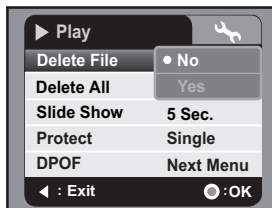

MENU OPTIONS

Video Menu

 This menu is for the basic settings to be used when shooting video clips.

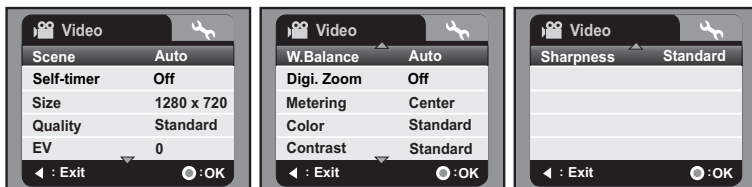

1. The default mode is Video Mode.
2. Press the **MENU** button.
3. Select the desired option item with the **▲ (MODE)** / **▼ (MENU)** buttons, and press the **◻** button to enter its respective menu.
4. Select the desired setting with the **▲ (MODE)** / **▼ (MENU)** buttons, and press the **◻** button.
5. To exit from the menu, press the **◀ (EXIT)** button.

Scene

Select from 9 different scene modes in accordance with the shooting conditions.

- * **[Blank]** Auto
- * **[Portrait]** Portrait
- * **[Night]** Night
- * **[Sports]** Sports
- * **[Landscape]** Landscape
- * **[Sunset]** Sunset
- * **[Beach/Snow]** Beach/Snow
- * **[Spotlight]** Spotlight
- * **[User Setting]** User Setting

Self-timer

This activates the self-timer and sets the delay time.

- * **[Blank]** Off
- * **[2s]** 2 Sec.
- * **[10s]** 10 Sec.

Size

This sets the size of the video clips to be captured.

- * **[1080]** 1440 x 1080
- * **[720]** 1280 x 720
- * **[VGA]** 640 x 480

Quality

This sets the quality (compression) at which the video clips is to be captured.

- * **[Fine]** Fine
- * **[Standard]** Standard
- * **[Economy]** Economy

EV

Your digital video camera adjusts the exposure of each shot automatically. However, if the subject is very dark, or very bright, you may override the digital video camera's automatic exposure determination to make the subject brighter or darker. This is called EV compensation. The EV compensation can be adjusted from -1.8EV to +1.8EV.

W.Balance

This sets the white balance for a variety of lighting conditions and permits images to be captured that approach the conditions that are seen by the human eye.

- * [Blank] Auto
- * [☀] Daylight
- * [☁] Cloudy
- * [☹] Fluoresc.1
- * [☹] Fluoresc.2
- * [⚡] Tungsten
- * [👁] Manual WB

Digi. Zoom

This sets whether or not to use digital zoom at the moment of capturing an image.

- * On / Off

Metering

This sets the metering method for calculating the exposure.

- * Center: Averages the light metered from the entire frame, but gives greater weight to the subject matter in the center.
- * Spot: A very small portion of the center of the screen is measured, and the exposure is calculated.

Color

This sets the color of the video clips to be captured.

- * Standard / Vivid / B&W / Sepia

Contrast

This sets the degree of difference between light and dark in video clips to be captured.

- * Standard / Hard / Soft

 
Sharpness

This sets the sharpness of the video clips to be captured.

- * Standard / Hard / Soft

Capture Menu

This menu is for the basic settings to be used when capturing still images.

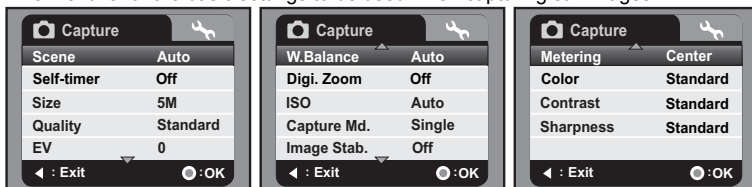

1. Press the **MODE** button to switch to capture mode.
2. Press the **MENU** button.
3. Select the desired option item with the **▲ (MODE)** / **▼ (MENU)** buttons, and press the **▣** button to enter its respective menu.
4. Select the desired setting with the **▲ (MODE)** / **▼ (MENU)** buttons, and press the **▣** button.
5. To exit from the menu, press the **◀ (EXIT)** button.

Scene

Refer to the section in this manual titled “Scene” in the Video Menu for further details.

Self-timer

Refer to the section in this manual titled “Self-timer” in the Video Menu for further details.

Size

This sets the size of the images to be captured.

* **[7.7m]** 3200 x 2400 (FW interpolation)

* **[5m]** 2560 x 1920

* **[3m]** 2048 x 1536

* **[1m]** 1280 x 960

* **[VGA]** 640 x 480

Quality

Refer to the section in this manual titled “Quality” in the Video Menu for further details.

EV

Refer to the section in this manual titled “EV” in the Video Menu for further details.

W.Balance

Refer to the section in this manual titled “W.Balance” in the Video Menu for further details.

Digi. Zoom

Refer to the section in this manual titled “Digi. Zoom” in the Video Menu for further details.

ISO

This sets the sensitivity for capturing images. When the sensitivity is raised (and the ISO figure is increased), photography will be possible even in dark locations, but the image will appear more pixelated (grainier).

* **[Blank]** Auto

*  64

*  100


*  200

*  400

Capture Md.

This sets the shooting mode for capturing still images.

* **[Blank]** Single: Captures a single image.

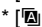*  AEB: Auto exposure bracketing capture mode.

*  Continuous: Captures 3 images continuously.

Image Stab.

This sets whether or not to use image stabilization at the moment of capturing an image. This function minimizes the influences of hand shaking when you want to capture an image.

* Off / On

Metering

Refer to the section in this manual titled “Metering” in the Video Menu for further details.

Color

Refer to the section in this manual titled “Color” in the Video Menu for further details.

Contrast

Refer to the section in this manual titled “Contrast” in the Video Menu for further details.

Sharpness

Refer to the section in this manual titled “Sharpness” in the Video Menu for further details.

Playback Menu

In this menu, choose which settings are to be used for still image/video clip playback.



1. Press the button.
2. Press the **MENU** button.
3. Select the desired option item with the **▲ (MODE) / ▼ (MENU)** buttons, and press the button to enter the respective menu.
4. Select the desired setting with the **▲ (MODE) / ▼ (MENU)** buttons, and press the button.
5. To exit the menu, press the **◀ (EXIT)** button.

Delete File

Refer to the section in this manual titled “Deleting Images/Video Clips/Audio Files” for further details.

Delete All

Refer to the section in this manual titled “Deleting Images/Video Clips/Audio Files” for further details.

Slide Show

Refer to the section in this manual titled “Slideshow Display” for further details.

Protect

 
Refer to the section in this manual titled “Protecting Images/Video Clips/Audio Files” for further details.

DPOF

Refer to the section in this manual titled “DPOF Settings” for further details.

Setup Menu

This menu sets your digital video camera's operating environment.

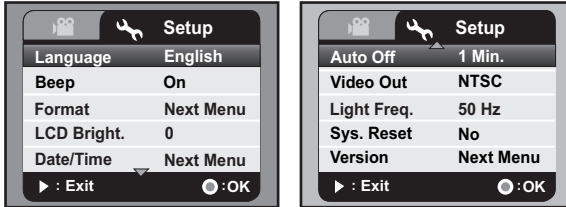

1. Press the **MENU** button.
2. Select the [Setup] menu with the ► (MENU) button.
3. Select the desired option item with the ▲ (MODE) / ▼ (MENU) buttons, and press the ◻ button to enter the respective menu.
4. Select the desired setting with the ▲ (MODE) / ▼ (MENU) buttons, and press the ◻ button.
5. To exit from the menu, press the ► (MENU) button.

Language

Refer to the section in this manual titled “Choosing the Language” for further details.

Beep

This sets whether or not to mute the digital video camera sound each time you press the digital video camera's buttons.

* On / Off

Format

Refer to the section in this manual titled “Formatting the Memory Card” for further details.

LCD Bright.

This sets the brightness of the LCD monitor screen.

* The adjustment range is from -5 to +5.

Date/Time

Refer to the section in this manual titled “Setting the Date and Time” for further details.

Auto Off

If no operation is performed for a specific period of time, the power to the digital video camera is automatically turned off. This feature is useful to reduce battery usage.

* Off / 1 Min. / 3 Min. / 5 Min. / 10 Min.

Video Out

Set TV/video compatibility with the equipment you are going to connect to the digital video camera.

* NTSC / PAL

Light Freq.

The function allows you to change the light frequency of the environment to 60 Hz or 50 Hz.

* 50 Hz / 60 Hz

Sys. Reset

This returns all basic settings to the digital video camera's default settings.

* No / Yes

Version

This displays the firmware version of the digital video camera.

INSTALLING SOFTWARE PROGRAM

1. Make sure you have Windows Media Player 9 or QuickTime 7.0 installed onto your computer first.
2. Install the decoder program (available on the CD).
 - H.264 files can be played back with Windows Media Player 9. (Decoder is designed for H.264 decode)

MP4/H.264 playback system requirements:

- At least 512MB of RAM
- 64MB or higher video card
- Windows 2000 Service Pack 4 or XP or Vista 32 or Vista 64
- DirectX 9.0b or higher
- Audio format 48KHz HE-AAC or AAC



Resolution	fps	CPU requirements
640 x 480	30 fps	2.4 GHz Intel Pentium 4 or higher
1280 x 720	30 fps	3.2 GHz Intel Pentium D (dual-core) or higher
1440 x 1080	30 fps	Core 2 Duo 2.0 & 128MB independent memory for image display


TRANSFERRING FILES TO YOUR COMPUTER

System Requirement

Windows	Macintosh
<ul style="list-style-type: none">■ Pentium III 800 MHz or equivalent■ Windows 2000/XP/Vista■ 256MB RAM (512MB recommended)■ 150MB available hard disk space■ CD-ROM drive■ Available USB port	<ul style="list-style-type: none">■ PowerPC G3/G4/G5■ OS 9.0 or later■ 256MB RAM (512MB recommended)■ 128MB hard disk space■ CD-ROM drive■ Available USB port

Downloading / Deleting Your Files via Computer

 1. Press the  button until the digital video camera powers on.
2. Connect one end of the USB cable to the USB terminal of the digital video camera.
3. Connect the other end of the USB cable to an available USB port on your computer.
4. Select [PC] with the **▲ (MODE) / ▼ (MENU)** buttons, and press the  button.
5. From the Windows desktop, double click on "My Computer".
6. Look for a new "removable disk" icon.
 - This "removable disk" is actually the memory (or memory card) in your video camera. Typically, the video camera will be assigned drive letter "E" or higher.
7. Double click on the removable disk and locate the DCIM and AUDIO folders.
8. Double click on the respective folder to open it to find more folders.
 - Your recorded images, video clips or audio files will be inside these folders.
9. Copy and paste, or drag and drop, files to a folder on your computer.
10. To delete files, simply select the unwanted files and delete.

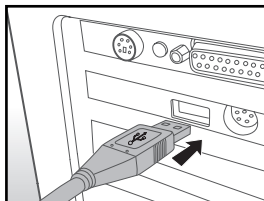

Mac users: Double-click the "untitled" or "unlabeled" disk drive icon on your desktop. iPhoto may automatically launch.





Notes on Image Printing

 
After transferring data to a computer, the digital images that have been saved in the SD/SDHC memory card from the digital video camera are stored and displayed and these can be printed on a variety of digital printers.

USING THE DIGITAL VIDEO CAMERA AS A PC CAMERA

Your digital video camera can act as a PC camera, which allows you to make video-conferences with business associates, or have a real-time conversation with friends or family. To use the digital video camera for videoconferencing, your computer must include the items listed below:

- Microphone
- Sound card
- Speakers or headphones
- Network or Internet connection

1. Press the  button until the digital video camera powers on.
2. After installing the PC camera driver (included on the CD-ROM) in your Windows operating system, restart your computer.
3. Connect one end of the USB cable to the USB terminal of the digital video camera.
4. Connect the other end of the USB cable to an available USB port on your computer.
5. Select [PC Camera] with the  (MODE) /  (MENU) buttons and press the  button.
6. Position the digital video camera steadily on a flat surface or use a tripod.
7. Launch the videoconferencing application software.
 - Simply follow the instructions in the application software to start your digital video camera.

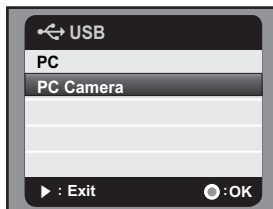

- This function is not supported by Mac and Microsoft Vista 64 system.
- This function does not support NetMeeting because its output is in Motion JPEG format. It only supports version MSN 8.1 or above or other software that supports motion JPEG, such as "AMCAP".
- The video resolution for videoconferencing applications is generally 320 x 240.
- For more information about the operation of videoconference application software, refer to its respective help documentation.

SPECIFICATIONS

Item	Description
Image sensor	1/2.5" CMOS sensor
Effective pixels	5.0 megapixels
Image resolution	<Still image> 7.7M: 3200 x 2400 (FW interpolation), 5M: 2560 x 1920, 3M: 2048 x 1536, 1M: 1280 x 960, VGA: 640 x 480 <Video clip> 1440 x 1080 (30 fps), 1280 x 720 (30 fps), 640 x 480 (30 fps)
Recording media	Supports SD/SDHC memory card (up to 8GB) (optional)
File format	Image format: JPEG; Video format: H.264; Audio format: AAC
Lens	Aperture: F3.3 ~ F3.7 Focal Length: 6.4 ~ 32 mm
Focus range	Macro Wide: 10cm ~ infinity Tele: 1m ~ infinity Standard Wide: 50cm ~ infinity Tele: 1m ~ infinity
Shutter speed	1 ~ 1/4000 sec.
LCD monitor	2.5" full color LTPS LCD (153K pixels)
Self-timer	10 sec delay, 2 sec delay
Exposure compensation	-1.8EV ~ +1.8EV (in 0.3EV increments)
White balance	Auto, Daylight, Cloudy, Fluoresc.1, Fluoresc.2, Tungsten, Manual WB
ISO	Auto, 64, 100, 200, 400
Interface	USB terminal, AV/OUT terminal, HDTV terminal, earphone jack
Power	Rechargeable Lithium-ion battery (3.7V)
Dimensions	Approx. 71.6 x 117.5 x 41.9 mm (without protruding parts)
Weight	Approx. 165g (without battery and memory card)












* Design and specifications are subject to change without prior notice.

APPENDIX
















Possible Number of Shots

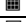The table shows the approximate shots/recording time that you can capture/record in each setting based on the capacity of the SD/SDHC memory card.

Possible recording time / sec (video clip)

Size	Quality	SD/SDHC memory card capacity						
		128MB	256MB	512MB	1GB	2GB	4GB SDHC	8GB SDHC
1440 x 1080 	 Fine	00:01:57	00:04:04	00:08:17	00:16:46	00:33:12	01:05:46	02:11:38
	 Standard	00:02:14	00:04:39	00:09:28	00:19:08	00:37:52	01:15:00	02:30:06
	 Economy	00:02:37	00:05:26	00:11:01	00:22:17	00:44:04	01:27:14	02:54:34
1280 x 720 	 Fine	00:02:37	00:05:26	00:11:01	00:22:17	00:44:04	01:27:14	02:54:34
	 Standard	00:03:09	00:06:30	00:13:11	00:26:38	00:52:40	01:44:15	03:28:37
	 Economy	00:03:57	00:08:06	00:16:24	00:33:06	01:05:26	02:09:29	04:19:04
VGA 640 x 480	 Fine	00:05:14	00:10:44	00:21:40	00:43:42	01:26:21	02:50:50	05:41:47
	 Standard	00:06:15	00:12:47	00:25:48	00:52:01	01:42:44	03:23:15	06:46:37
	 Economy	00:07:43	00:15:47	00:31:51	01:04:12	02:06:50	04:10:56	08:22:02

Possible number of shots (still image)

Size	Quality	SD/SDHC memory card capacity						
		128MB	256MB	512MB	1GB	2GB	4GB SDHC	8GB SDHC
7.7m 3200 x 2400 (FW interpolation)	 Fine	32	67	138	278	545	1091	2194
	 Standard	42	89	184	369	725	1450	2917
	 Economy	53	111	229	460	903	1805	3632
5m 2560 x 1920	 Fine	46	95	195	391	767	1532	3081
	 Standard	61	126	259	519	1019	2036	4094
	 Economy	76	157	323	647	1269	2535	5098
3m 2048 x 1536	 Fine	69	142	291	582	1141	2279	4583
	 Standard	92	189	388	774	1517	3030	6092
	 Economy	115	236	483	965	1880	3774	7588
1m 1280 x 960	 Fine	144	294	599	1195	2340	4670	9387
	 Standard	191	391	797	1588	3110	6207	12477
	 Economy	238	486	991	1976	3869	7722	15523
VGA 640 x 480	 Fine	390	797	1625	3239	6341	12654	25437
	 Standard	520	1061	2162	4309	8436	16836	33844
	 Economy	648	1322	2693	5370	10512	20978	42169

Troubleshooting

Refer to the symptoms and solutions listed below before sending the digital video camera for repairs. If the problem persists, contact your local reseller or service center.

Symptom	Cause	Solutions / Corrective Actions
The power does not come on.	The battery is not inserted.	Insert the battery correctly.
	The battery is exhausted.	Recharge the battery.
The battery or video camera feels warm.	Long period of continuous use of the video camera.	
Even when the shutter button is pressed, the digital video does not shoot.	The SD/SDHC memory card does not have any free capacity.	Insert a new SD/SDHC memory card, or delete unwanted files.
	The video camera is not in shooting mode.	Set the video camera to shooting mode.
	The SD/SDHC memory card is write-protected.	Remove the write-protection.
The video camera cannot focus.	The lens is dirty.	Wipe clean with a soft, dry cloth or lens paper.
	The distance to the subject is smaller than the effective range.	Place your subject within the effective focus range.
Files cannot be deleted.	The file is protected.	Cancel protection.
	The SD/SDHC memory card is write-protected.	Remove the write-protection.
Cannot download images.	The free space on the hard disk in your computer may be insufficient.	Check whether the hard disk has a space for running Windows, and if the drive for loading image files has capacity at least of the memory card inserted in the video camera.

Customer care

More information on the complete AgfaPhoto digital camera product range can be found at www.plawa.com and www.plawausa.com.

Service & Repair (USA/ Canada):

1-866 475 2605

www.plawausa.com

Support Service (USA/ Canada)

support-apdc@plawausa.com

Service & Repair Hotline (EU):

00800 752 921 00 (from a landline only)

Service & Support Hotline (Germany):

0900 1000 042 (1.49 euros/min. from a German landline only)

Online Service / International contact:

support-apdc@plawa.com

Manufactured by

plawa-feinwerktechnik GmbH & Co. KG

Bleichereistraße 18

73066 Uhingen

Germany

AgfaPhoto is used under license of Agfa-Gevaert NV & Co. KG. Agfa-Gevaert NV & Co. KG. does not manufacture this product or provide any product warranty or support. For service, support and warranty information, contact the distributor or manufacturer. Contact: AgfaPhoto Holding GmbH, www.agfaphoto.com